

Steel Tent Weights

Stackable 11.5 kg steel weights for anchoring pop-up and party tents



One weight on a tent leg

Solid steel weights with a durable coating for anchoring your tent on any surface – paving, concrete, grass or sand. They cannot spill or leak, have a carrying handle and stack to save space in your car.


Size	27 × 27 cm, thickness 5.5 cm
Weight	11.5 kg per piece
Leg size	fits legs up to 5.5 cm
Sets	4, 6, 8 or 12 pieces
Material	steel with protective coating

Package contents

- Steel weights according to the ordered set (4, 6, 8 or 12 pieces)

Installation and use

- 1 Set up the tent**
Open and lock the tent on a firm, level surface at its final position.
- 2 Place the weight**
Slide the weight from the side around the tent leg so the leg sits in the cut-out and the weight lies flat on the foot plate and the ground.
- 3 Every leg**
Put one weight on every leg. Tents 3x6 m and 4x8 m have 6 legs, all other sizes have 4 legs.
- 4 Add more weight**
For tents larger than 3x3 m, with walls, or when wind is expected, use 2 weights per leg (23 kg). Stack the second weight exactly on top of the first one.
- 5 Check**
Make sure all weights lie flat and stable and do not touch the walls or other parts that could move.

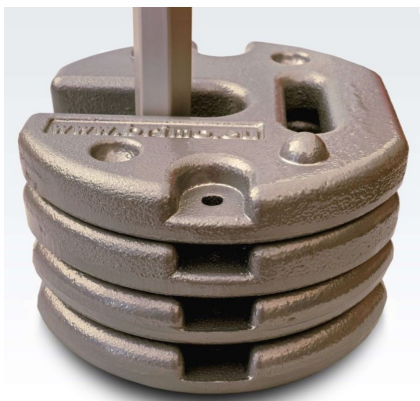

Weights stacked for more load

Safety instructions

For this product

- Each weight weighs 11.5 kg. Lift with your knees, not your back, use the handle and wear gloves and safety shoes.
- Watch your fingers when stacking or placing weights – risk of crushing.
- Weights increase stability but do not make a tent storm-proof. Take the tent down in strong wind.
- Weights at the legs can be a tripping hazard – mark them in public areas.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Wipe dry after use and store in a dry place.
- Touch up any damaged coating to prevent rust.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.