

Transport Bag for Tent Frame

Wheeled transport bag for folded pop-up tent frames



Bag for 2x2 – 3x6 m tents: black and red, 160 cm



Bag for 4x4 – 4x8 m tents: all black, 200 cm

A sturdy polyester bag with wheels, several handles and a strong zip that closes the complete folded frame of your pop-up tent. It protects the tent during transport and storage. There are two designs: a black and red bag, 160 cm high, for tents 2x2 to 3x6 m, and an all-black bag, 200 cm high, for tents 4x4, 4x6 and 4x8 m. The bags for 4x6 m and 4x8 m have a large pocket for covers and accessories.

2x2 / 3x3 m	25 × 25 × 160 cm, black and red
2x3 / 3x4.5 m	25 × 38 × 160 cm, black and red
3x6 m	33 × 50 × 160 cm, black and red
4x4 m	33 × 33 × 200 cm, all black
4x6 m	33 × 40 × 200 cm, all black
4x8 m	33 × 55 × 200 cm, all black
Material	durable polyester, wheels, zip

Package contents

- 1 transport bag in the size for your tent

Installation and use

- 1 Fold the tent**
Close the tent completely and lower all legs to the lowest position. Make sure the roof fabric is not caught in the frame.
- 2 Open the bag**
Lay the bag flat and open the zip along its full length.

- 3 Insert the frame**
With two persons, lay the folded frame into the bag with the feet towards the wheel end.
- 4 Close**
Close the zip carefully. Do not force it – check that no fabric is caught. Fasten the straps if your bag has them. Put walls and accessories into the pocket (4x6 and 4x8 m).
- 5 Move**
Tilt the bag onto its wheels and pull it by the top handle. Carry it on stairs and kerbs.

Safety instructions

For this product

- A packed tent is heavy – lift and carry it with two persons. The 200 cm bags for 4x4 – 4x8 m tents are especially long and heavy.
- Watch your fingers when folding the frame and closing the bag.
- Do not stand or sit on the bag and do not pull it by the zip.
- A bag standing upright can fall over – lay it down or lean it securely against a wall.
- Secure the bag during transport in a vehicle so it cannot move.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Pack the tent only when it is dry. If you must pack it wet, unpack and dry it within 24 hours.
- Clean the bag with a damp cloth. Keep the zip free of sand and dirt.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.